

iPod in Prius CD Storage Box



The CD storage box is a convenient location in your 2004-2007 Prius for your iPod when installing the DICE iPod Integration Kit.




General Comments

- Use the great AIC-100i install instructions “hybrideyes” has posted on PriusChat.com to prepare your Prius for installation of the DICE iPod Integration Kit: <http://priuschat.com/index.php?showtopic=12201&st=0&p=151275&#entry151275>
Instructions 3 through 8 are directly applicable to installation of the DICE iPod Integration Kit.
- Download the Toyota Install Guide from www.diceelectronics.com. Most of this guide doesn't apply to Prius installation because hybrideyes's posting is a much better approach. However, steps 5, 6, & 7 are helpful. It is not necessary to disconnect the battery as stated in the guide.
- The following pages include photos, annotations, and comments that supplement the above instructions and show how to prepare the CD storage box for your iPod.

DICE iPod Integration Kit



Contents of DICE iPod Integration Kit for 2004-2007 Prius

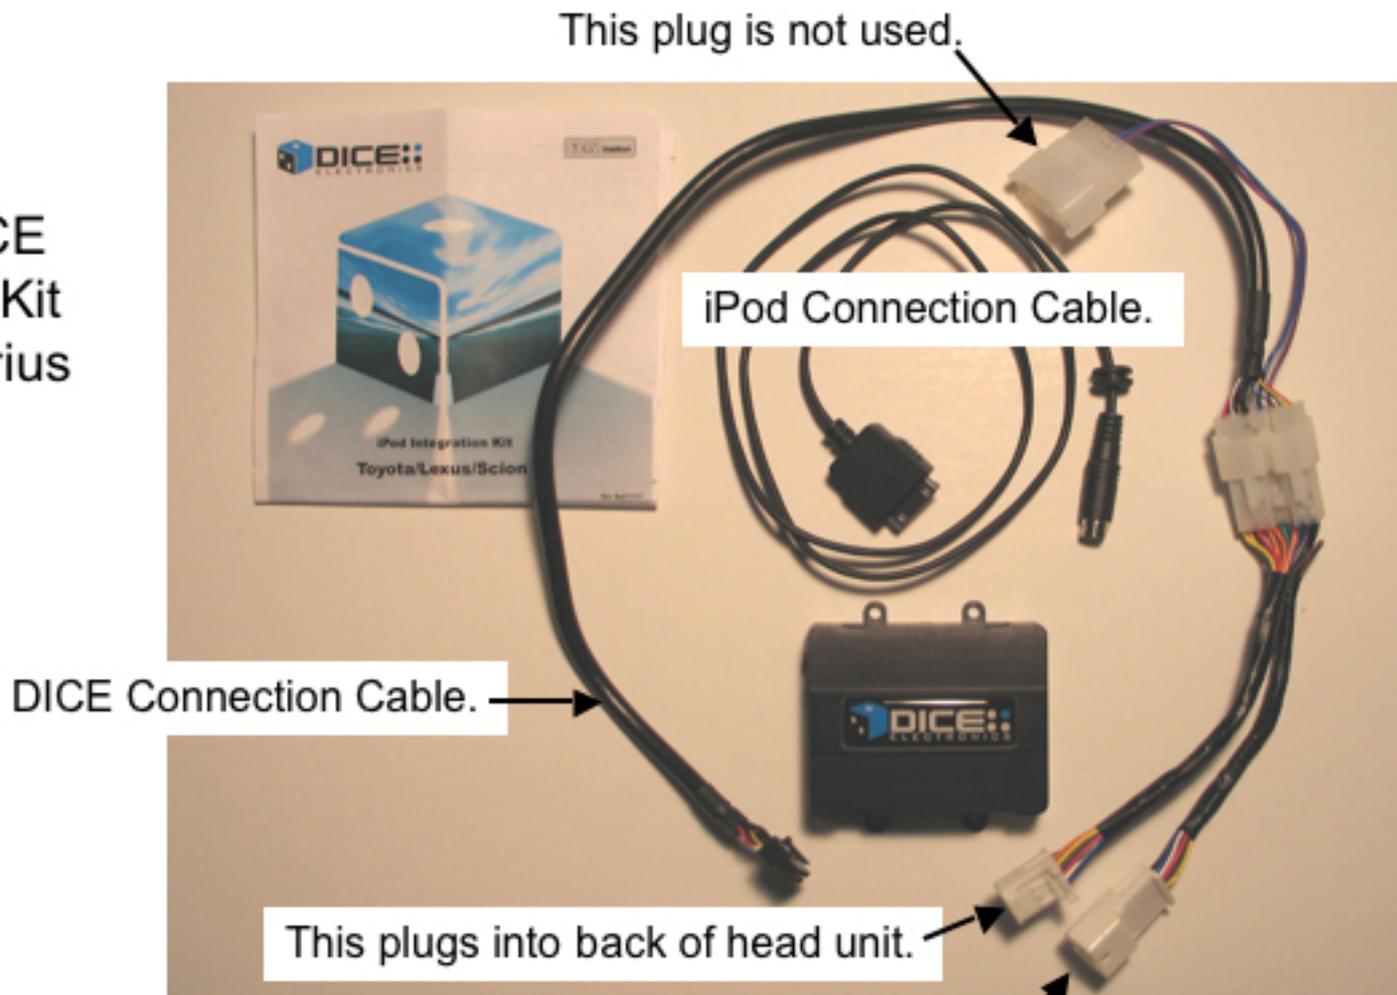

This is for Satellite Radio or External CD changer (not used normally).


iPod Connection Cable

- Stretch a 1/4" grommet over the round plug on the iPod connection cable.
- Grommets are in electrical section of your hardware store.

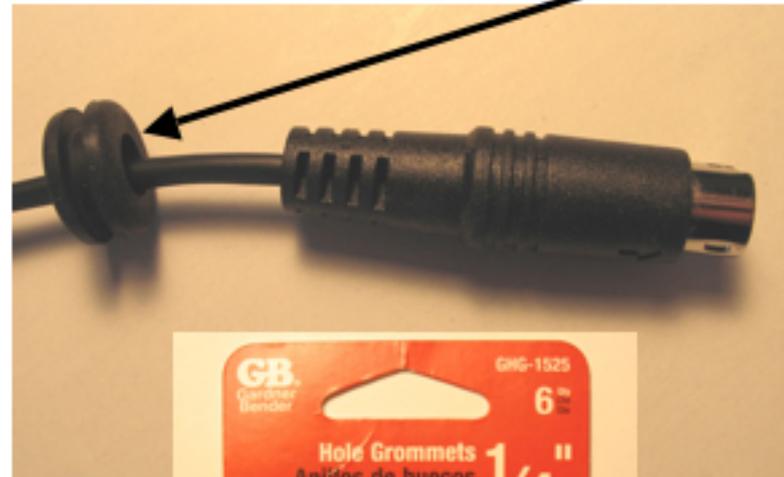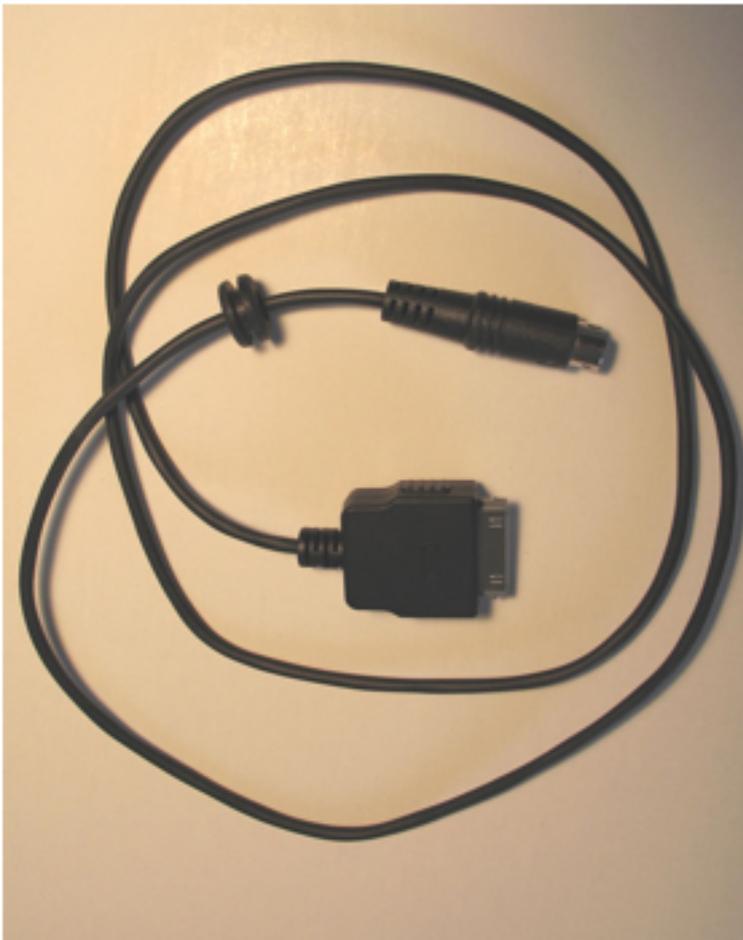


Drill Hole for iPod Cable

- There is ample room behind the CD storage box to work and feed the cable.
- Drill 15/32" hole in back of CD storage box. Start small with 1/4" bit and work up. Use light pressure so you can stop as soon as you penetrate.
- Smooth hole with round file.

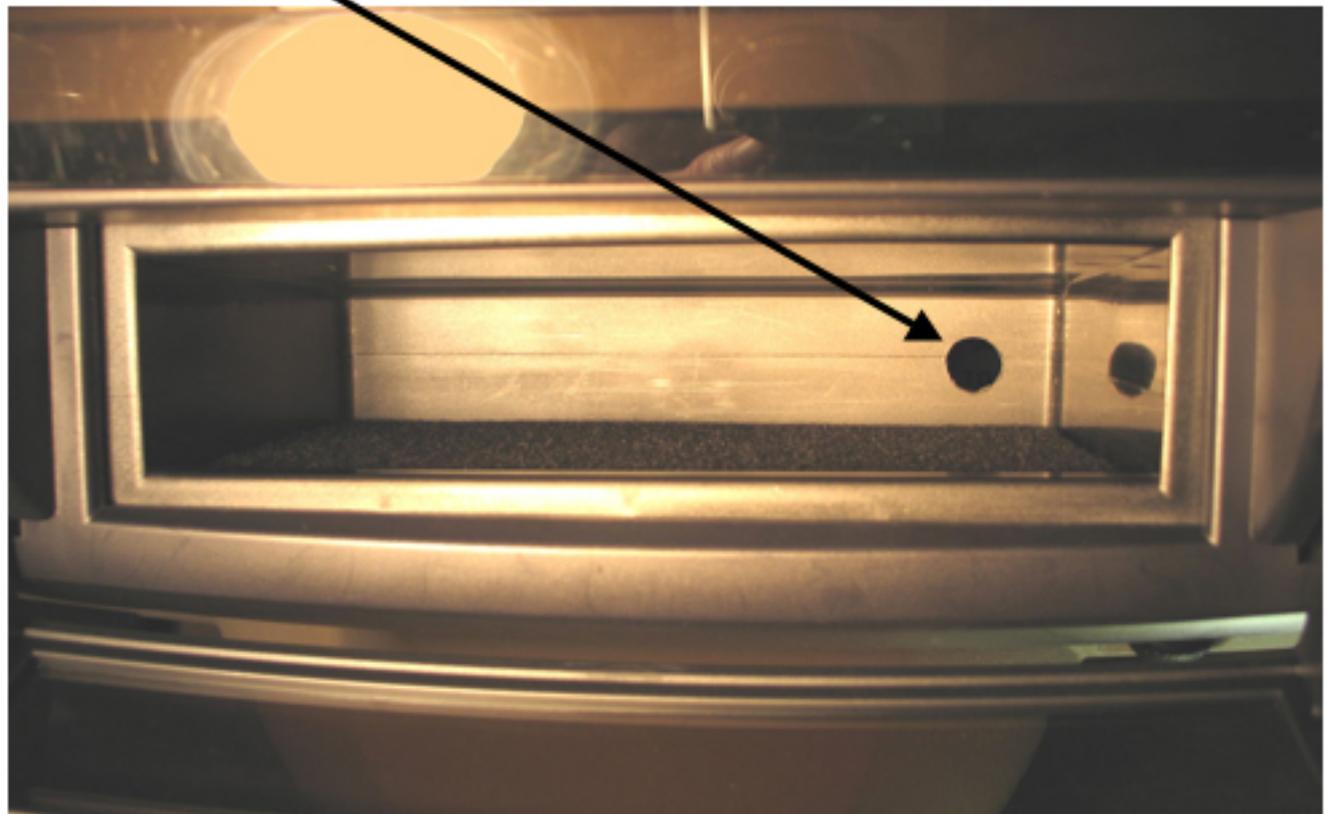

Install iPod Connection Cable

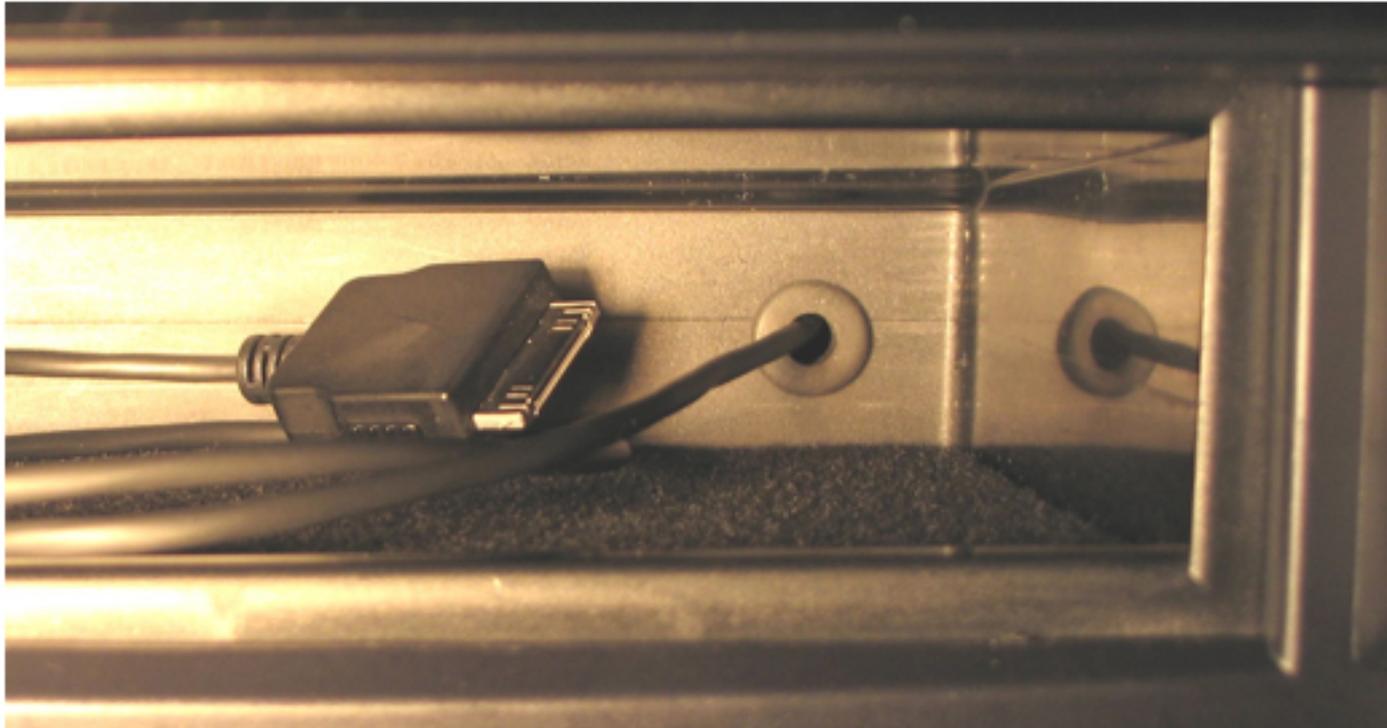

Feed round plug of iPod connection cable through hole in back of CD storage box and push grommet into place. It is helpful to have one finger behind box when pushing grommet into place.



Install DICE Box

- Connect the DICE cable and the iPod cable to the DICE box and position it. A strip of adhesive velcro along the top helps hold it in place.
- The location shown is clear of the lower glove box, but easily accessible by removing the lower glove box.



View looking left through lower glove compartment opening.